

3D PRINTING AND DESIGN REFERENCE DOCUMENT

| | |
|------------------------|----------------|
| Document Title: | Document Title |
| Document No.: | 1715849880 |
| Author(s): | jattie |
| Contributor(s): | |

REVISION HISTORY

| Revision | Details of Modification(s) | Reason for modification | Date | By |
|----------|----------------------------|---------------------------|---------------------|--------------------------|
| 0 | Draft release | Document description here | 2024/05/16 08:58 | Gerhard van der Linde |


07 - XY and Hole Compensation

This section makes use of the model [XY & Hole Compensation Calculator](#) by [@walloper3](#)


Download the model, slice, print and measure and use the calculator to calculate the compensation parameters.



<https://www.printables.com/model/775001-xy-hole-compensation-calculator-for-orca-slicer-et/files>

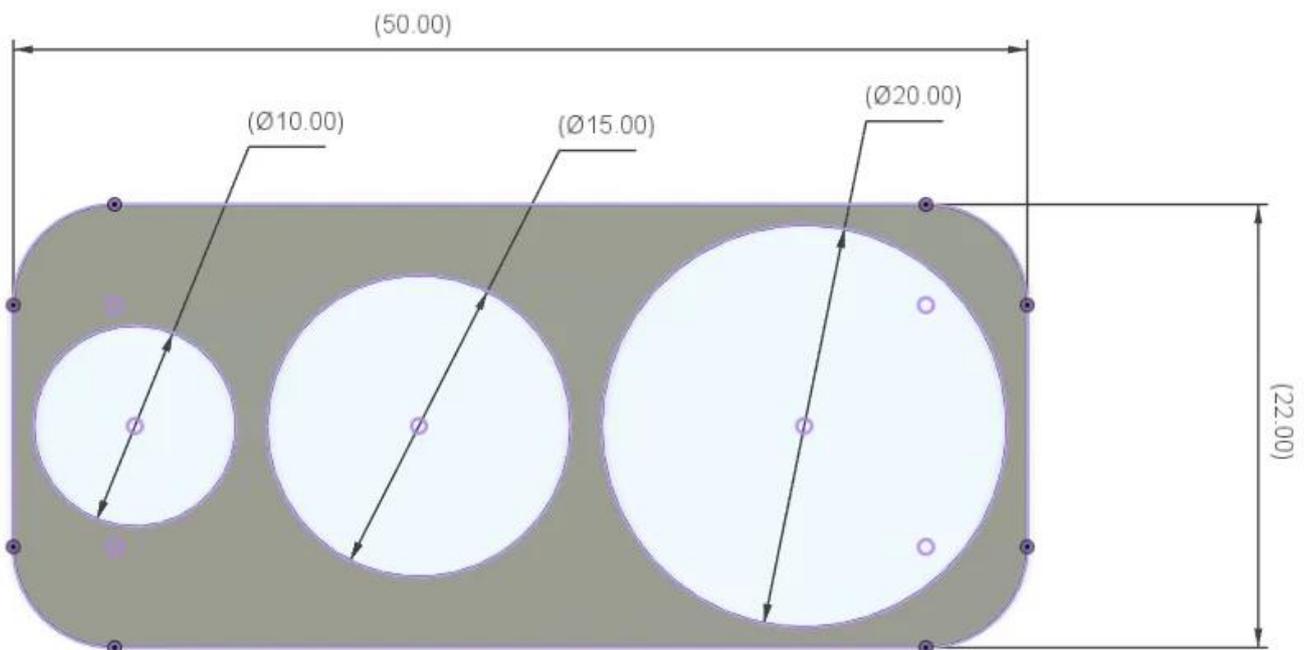

Once printed enter the measured dimensions into the calculation fields below:

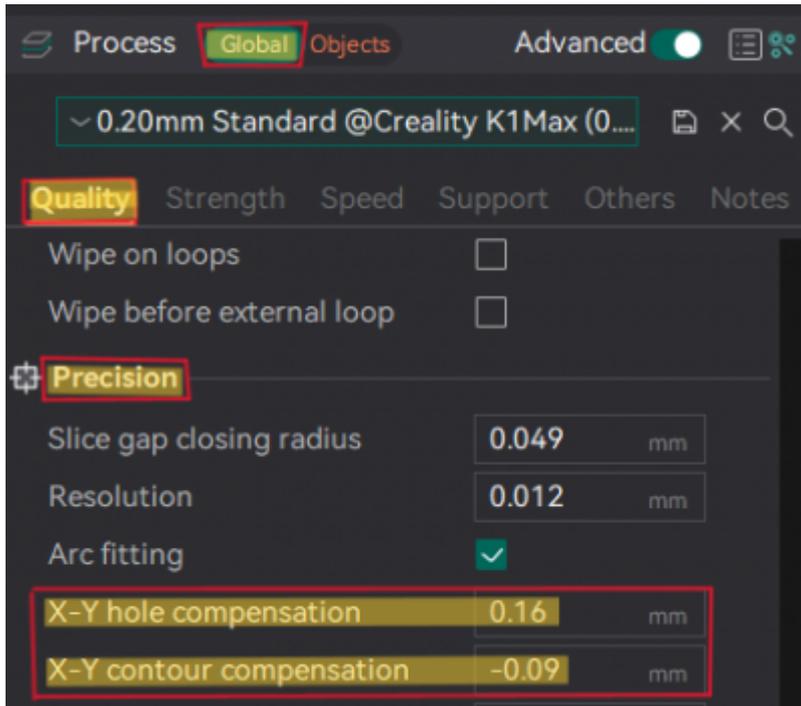

In Orca/Bambu Studio and Similar platforms fill in the calculated values under XY hole compensation and XY contour compensation.



Please consider thanking the author of the model by uploading your print result to the printable page.

From: <http://www.3dfaq.net/> - 3D Printing Wiki

Permanent link: http://www.3dfaq.net/02_printer_tuning/07_dimensional_accuracy?rev=1721235656

Last update: 2024/07/17 17:00

